


# BLOWER RESISTOR

## BLOWER RESISTER INSPECTION

### INSPECT BLOWER RESISTER CONTINUITY

AC066-01

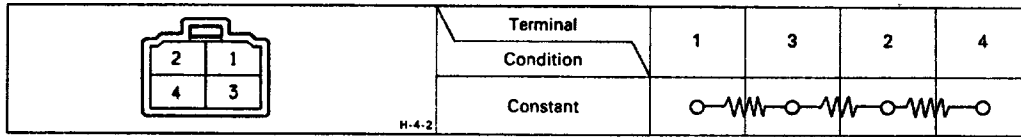

V00823

If continuity is not as specified, replace the blower resistor.