

BODY OUTSIDE MOULDING COMPONENTS

DOBK -01

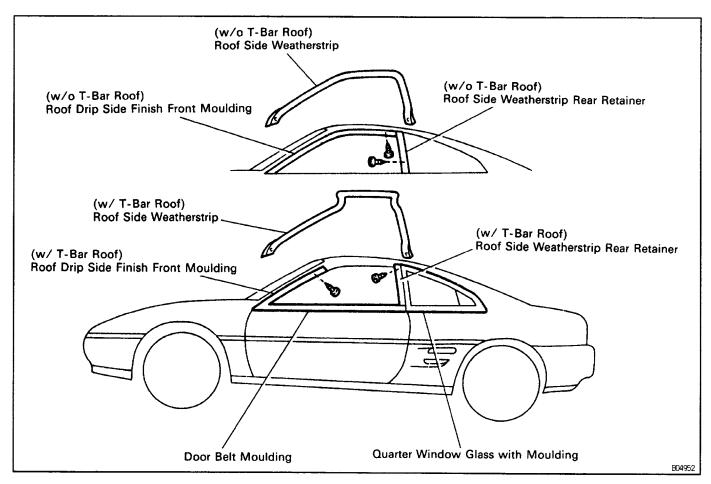


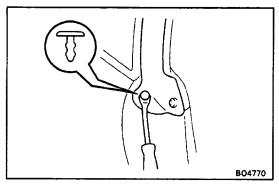

ROOF DRIP MOULDING REMOVAL

BOOBL -- 01

- 1. REMOVE ROOF SIDE WEATHERSTRIP
- (a) Using the clip remover, remove four clips from the weatherstrip.
- (b) Remove the weatherstrip from the moulding and the retainer.

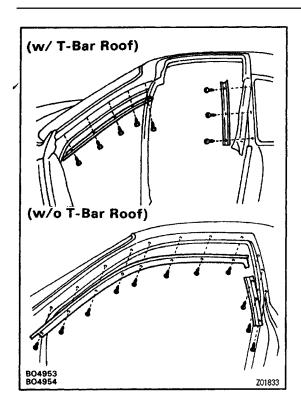

2. REMOVE ROOF DRIP SIDE FINISH FRONT MOU-LDING

(w/ T -Bar Roof)

Remove five screws and the moulding.

(w/o T – Ba r Roof)

Remove eight screws and the moulding.

3. REMOVE ROOF SIDE WEATHERSTRIP REAR RE-TAINER

Remove three screws and the retainer.

ROOF DRIP MOULDING INSTALLATION

1. INSTALL ROOF SIDE WEATHERSTRIP REAR RE-TAINER

Install the retainer with three screws.

2. INSTALL ROOF DRIP SIDE FINISH FRONT MOU-LDING

(w/ T- Bar Roof)


Install the moulding with five screws.

(w/o T-Bar Roof)

Install the moulding with eight screws.


3. CLEAN BODY

Wipe off any adhesive left on the body with cleaner. ^

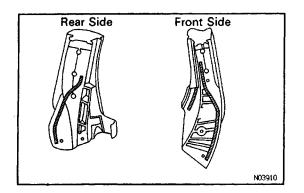

I. INSTALL ROOF SIDE WEATHERSTRIP

- (a) Install the seal to the weatherstrip as shown.
- (b) Install the weather strip to the moulding and the retainer.
- (c) Install four clips.

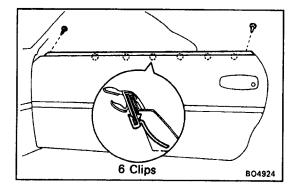

DOOR BELT MOULDING REMOVAL

. REMOVE FRONT DOOR COMPONENTS PARTS: (See steps 1, 2, 3, 4, 5, 6, 11, 12 and 14 on pages BO-16 to BO-19)

2. REMOVE DOOR BELT MOULDING (See step 15 on page BO- 19)

DOOR BELT MOULDING INSTALLATION

- 1. INSTALL DOOR BELT MOULDING (See step 12 on page BO-23)
- 2. INSTALL FRONT DOOR COMPONENT PARTS: (See steps 13, 15, 16, 24, 25, 26, 27, 28 and 29 on pages BO-23 to BO-27)

QUARTER WINDOW GLASS WITH MOULDING REMOVAL

(See steps 1 to 10 on pages BO-47 to BO-49)

QUARTER WINDOW GLASS WITH MOULDING INSTALLATION

(See steps 1 to 12 on pages BO-49 20 BO-50)

BOOBR-01