


## ELECTRONIC CONTROL SYSTEM PRECAUTION

Do not open the cover or the case of the ECU and various computers unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)

## LOCATION OF COMPONENTS

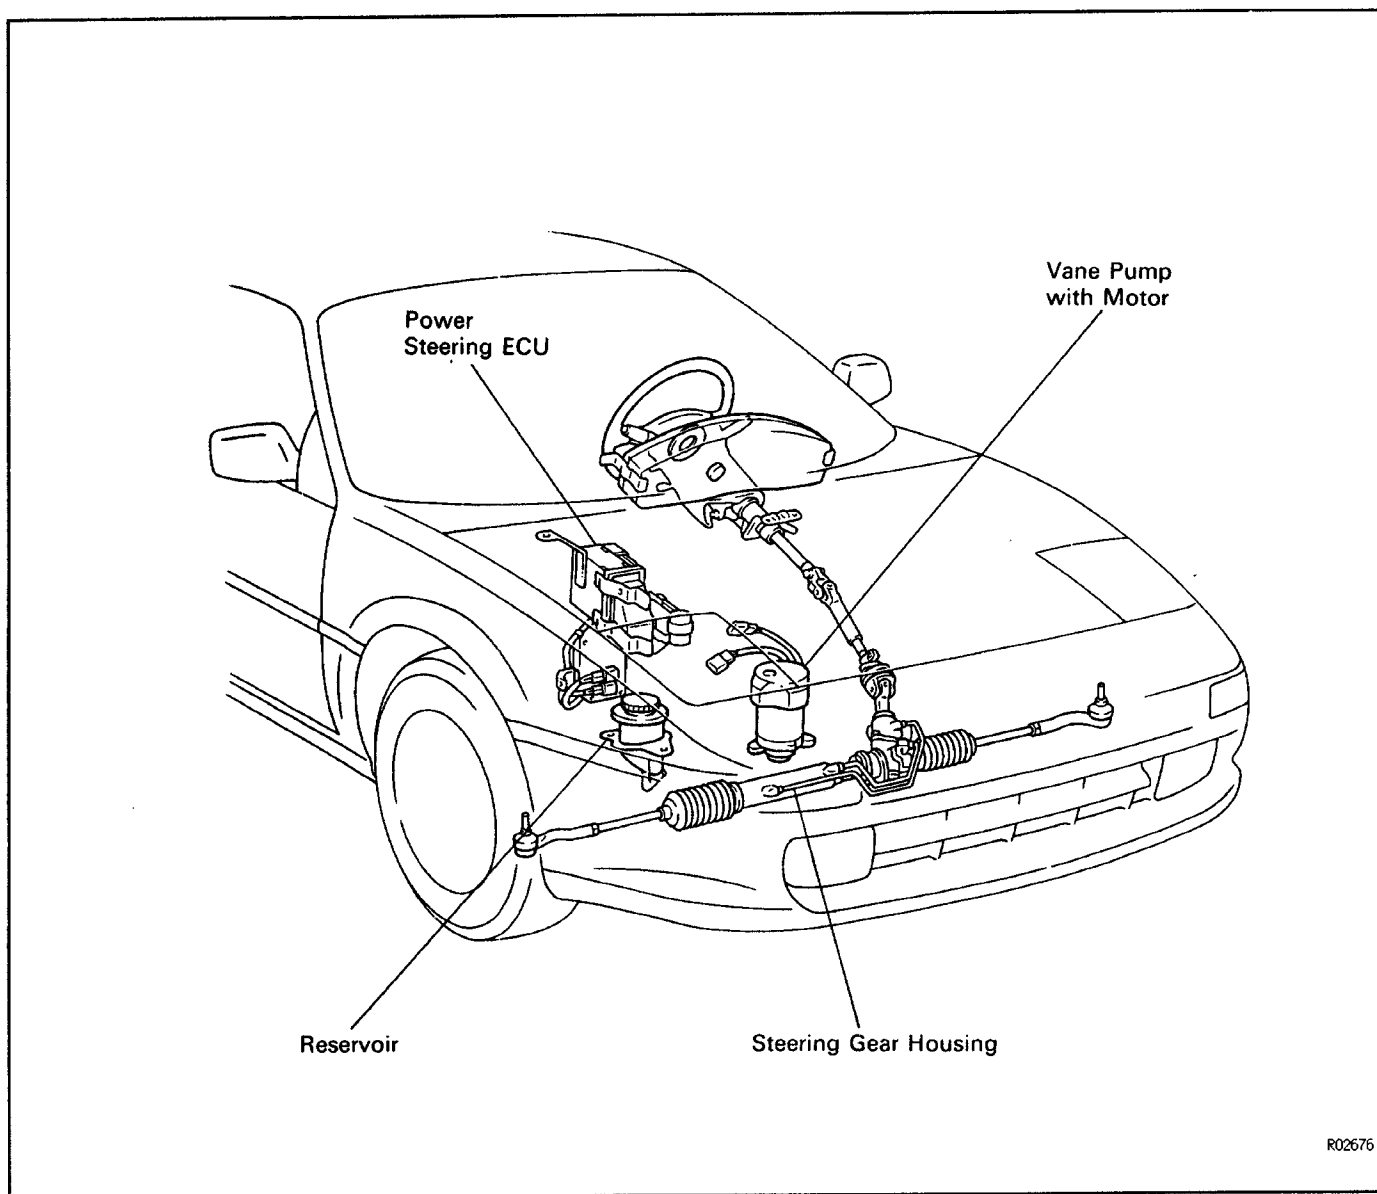

# WIRING DIAGRAM

