PREPARATION SST (SPECIAL SERVICE TOOLS)

\$A08U-01

| e | | |
|------------|--|--|
| | 09310–35010 Countershaft Bearing Replacer | |
| | 09315–00021 Clutch Release Bearing Remover & Replacer | |
| | 09316–60010 Transmission & Transfer Bearing Replacer | |
| | (09316–00010) Replacer Pipe | |
| O | (09316–00040) Replacer "C" | |
| | 09520–00031 Rear Axle Shaft Puller | |
| \bigcirc | 09527–17010 Rear Axle Shaft Bearing Remover | |
| | 09608–20012 Front Hub & Drive Pinion Bearing Tool Set | |
| | (09608–00040) Replacer | |
| 0 | (09608–03020) Handle | |
| OFF | 09628–10011 Ball Joint Puller | |
| | 09710–22041 Rear Suspension Bushing Tool Set | |
| | (09710–02050) Base | |
| | | |



09950-00020 Bearing Remover

RECOMMENDED TOOLS

SA08V-01

| 09025–00010 Small Torque Wrench | |
|---------------------------------|--|
| 09905–00013 Snap Ring Pliers | |
| | |

EQUIPMENT

SAOBW-01

| Torque wrench | |
|---------------|--|